


# How to Level A Slope for Putting Green & Artificial Grass Installation

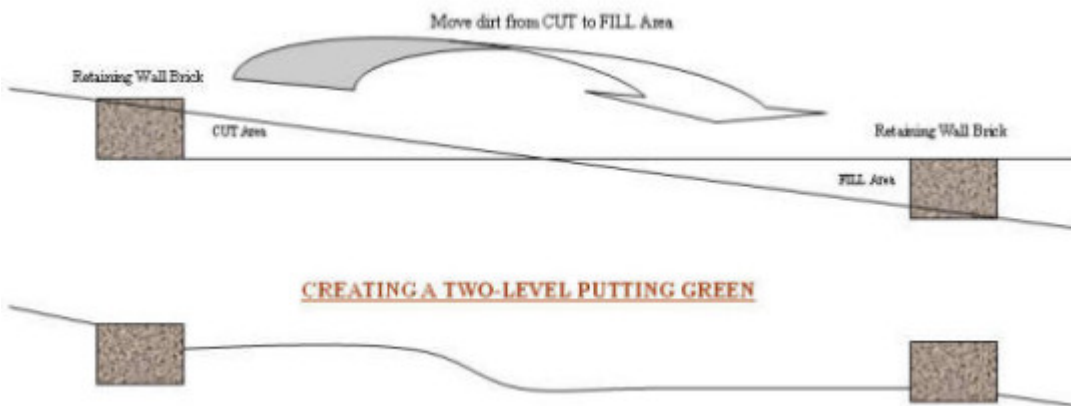

The diagram shows how to turn a slope into a level area for putting green installation.

1. Excavate dirt on the high side of the slope, and move it to the low side.
2. Install a retaining wall (brick or stone) to keep the high side from eroding downhill.
3. Install a retaining wall on the low side to keep fill dirt from washing away.



[info@StarProGreens.com](mailto:info@StarProGreens.com)

[www.StarProGreens.com](http://www.StarProGreens.com)